

Proper Installation of the Transfer Film to the 201+

This should help with the proper routing position of the Transfer Film into the 201+ Printer during initial installation or when changing the Film when the LCD prompts [Film END] message.


NOTES –

- Direct touching contaminates the ribbon/retransfer film and causes uneven print quality.
- Avoid excessive impact on the ribbon/retransfer film when replacing them.
- Even within the warranty period, fees may be charged on servicing the printer using non-genuine products.
- When the film cartridge is removed, do not touch the interior space, which is very hot.


The Printers LCD Panel or the Printers Windows Driver will provide an estimate of the remaining ribbon/retransfer film life for your information. The LCD displays a [FILM END] warning when it is close to running out.

Installing or replacing



- 1) Open the front cover:
Pull the **handle**① and swing the **front door** open②.

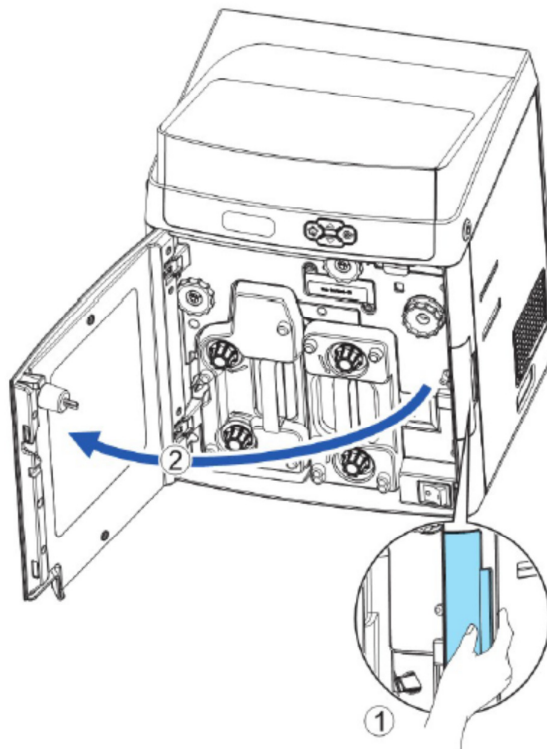

- 2) Push the Retransfer Film Lock① towards the Film Cartridge, to unlock the cartridge, and pull out the whole cartridge②.

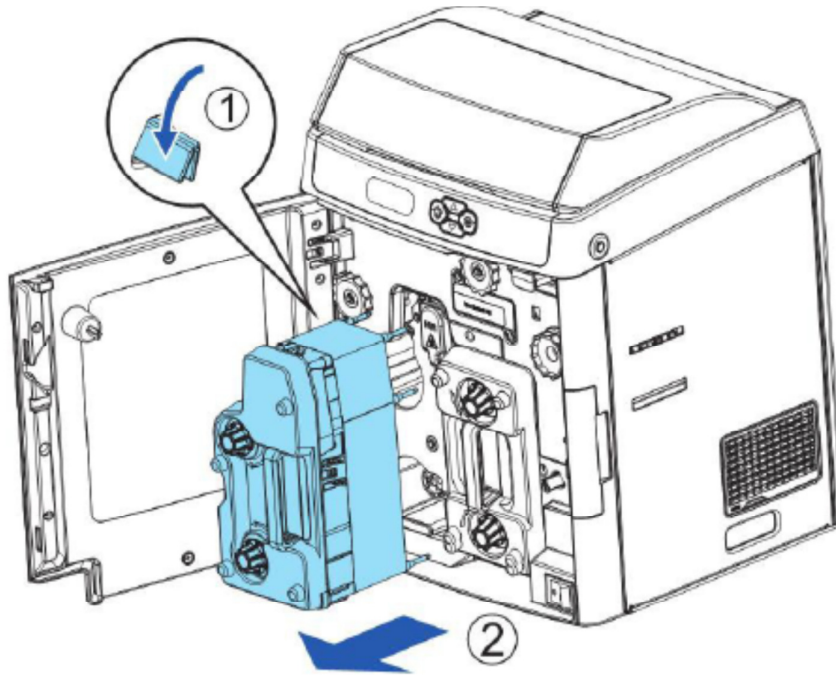


- 3) To load new Retransfer Film onto cartridge, place the green spool ① of the Transfer Film to the Green feeding hub of the cartridge.
- 4) While unwinding the Transfer Film, route② the film around five guiding spool poles. Note the change of direction on the 4th spool guide.
- 5) Finally, push the black spool③ of the new Transfer Film onto the Black Winding hub of the cartridge.

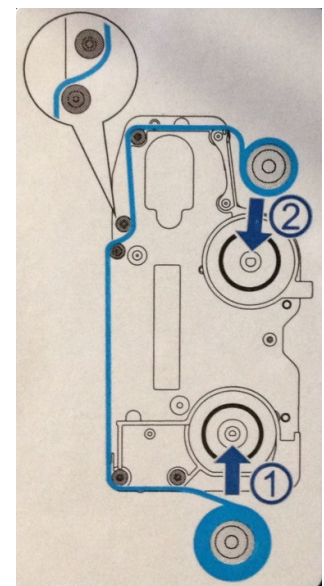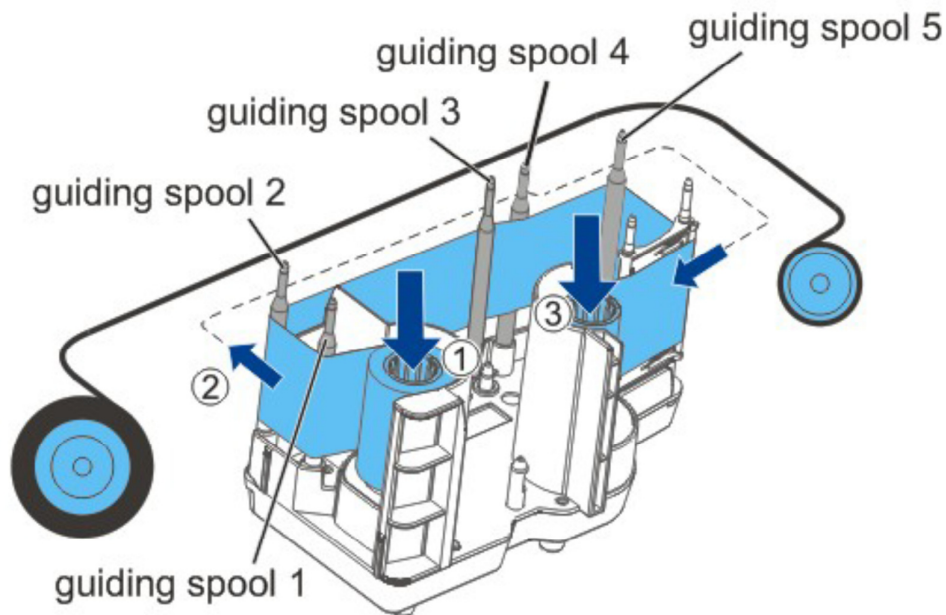

NOTE –

- Apply some force to push the spools onto the hubs.
- The Transfer Film should be slightly tightened and not slanted.

- 6) As shown in the diagram below, push in the Retransfer Film cartridge into its cavity until a “click” is heard to indicate it is fully inserted.

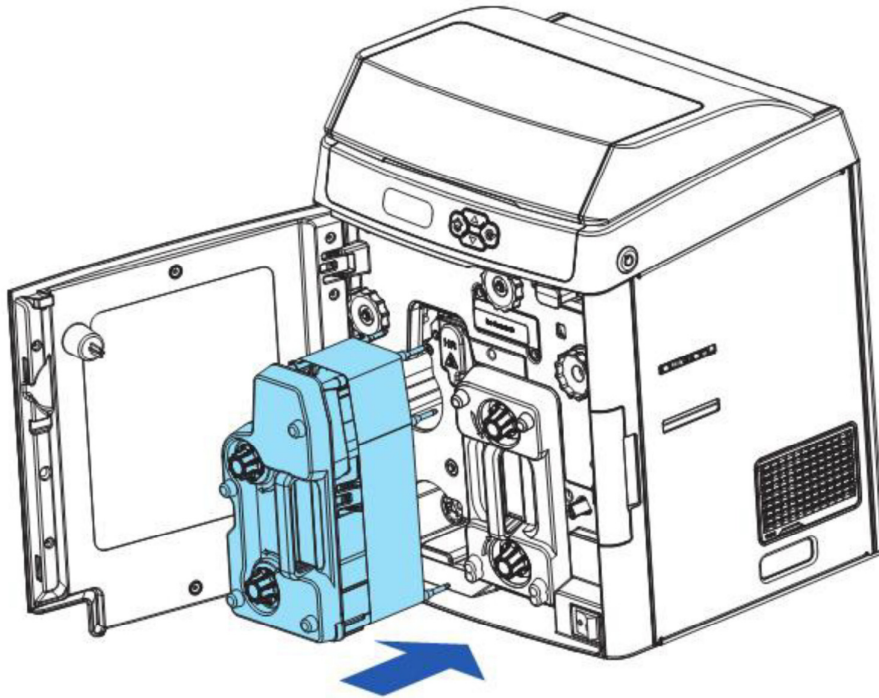


- 7) Improper retransfer film installation affects the overall print quality. After inserting the Retransfer Film Cartridge, double-check so that there is no slanted film:
- A) Open the printer top cover.
 - B) Take out the Card Hopper.
 - C) Take out the Access Cover, visible when the Card Hopper is removed (picture A).



Picture A


- 8) Confirm the Retransfer Film stays within the area shown in picture B (Between the two stages of guiding spool 5). If not, re-install Retransfer film cartridge by following above directions.

Transfer Film -
Make sure the film is lying flat across,
no twists, slanting or discrepancies.

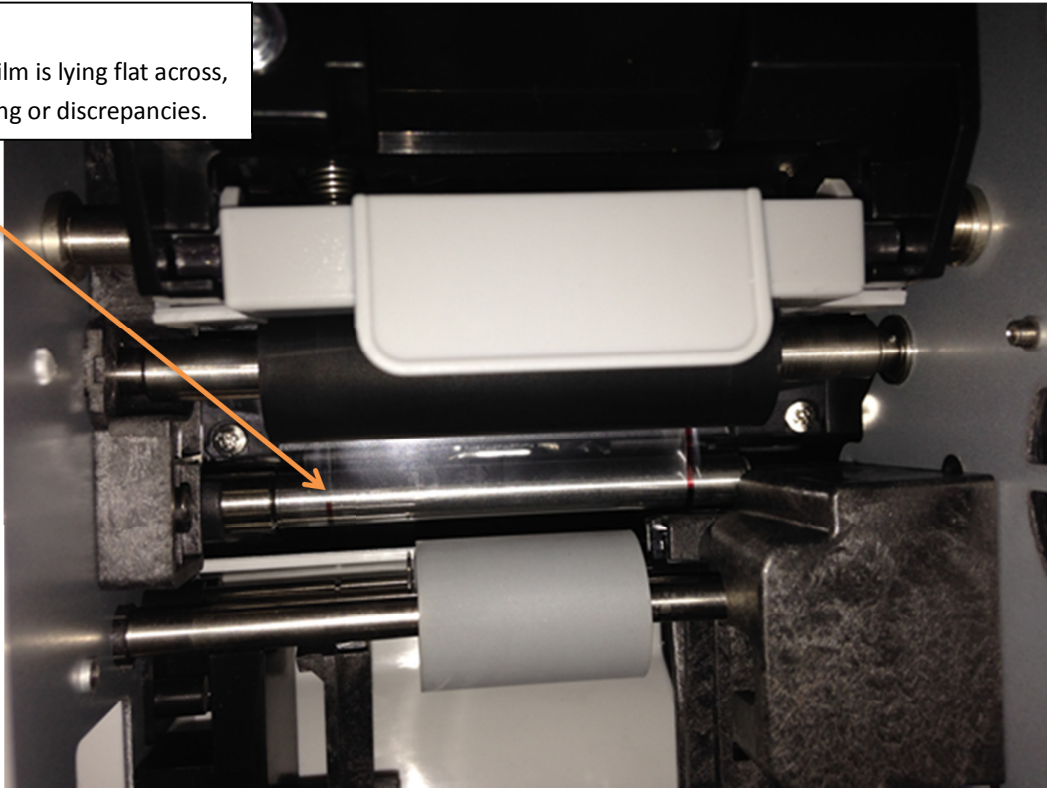

Picture B

- 9) Close the front cover to its original position.

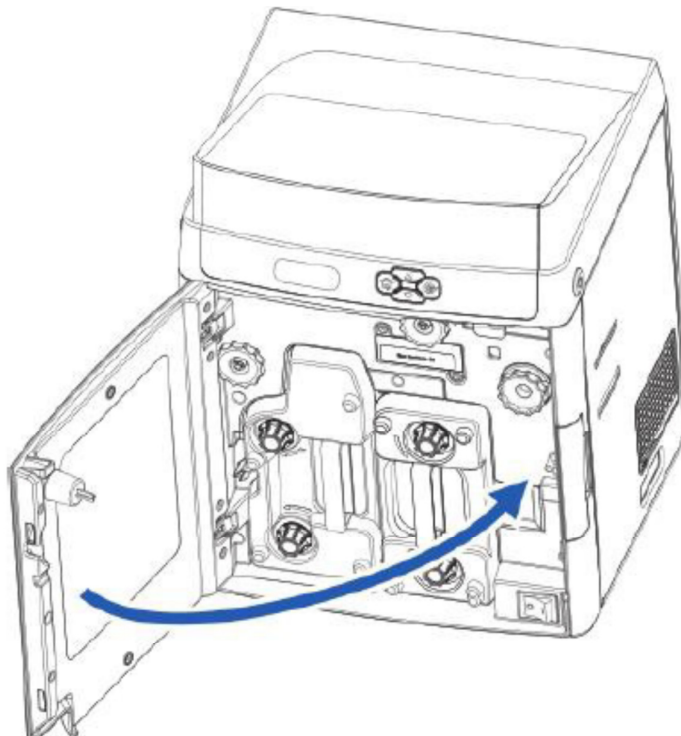

- 10) Press the **SET** key when the LCD screen displays [Please press SET key].