

## Proper Installation of the Color Ribbon to the 201+

This should help with the proper routing position of the Color ribbon into the 201+ Printer during initial installation or when changing the Ribbon when the LCD prompts [RIBBON END] message.


### NOTES –

- Direct touching contaminates the ribbon/retransfer film and causes uneven print quality.
- Avoid excessive impact on the ribbon/retransfer film when replacing them.
- Using non-genuine products may cause poor print quality and printer malfunction.
- Quality and reliability of the non-genuine products are not guaranteed.
- Even within the warranty period, fees may be charged on servicing the printer using non-genuine products.


The Printers LCD Panel or the Printers Windows Driver will provide an estimate of the remaining ribbon/retransfer film life for your information. The LCD displays a [RIBBON END] or [FILM END] warning when they close to running out.

Installing or replacing


- 1) Open the front cover:  
Pull the **handle**① and swing the **front door** open②.

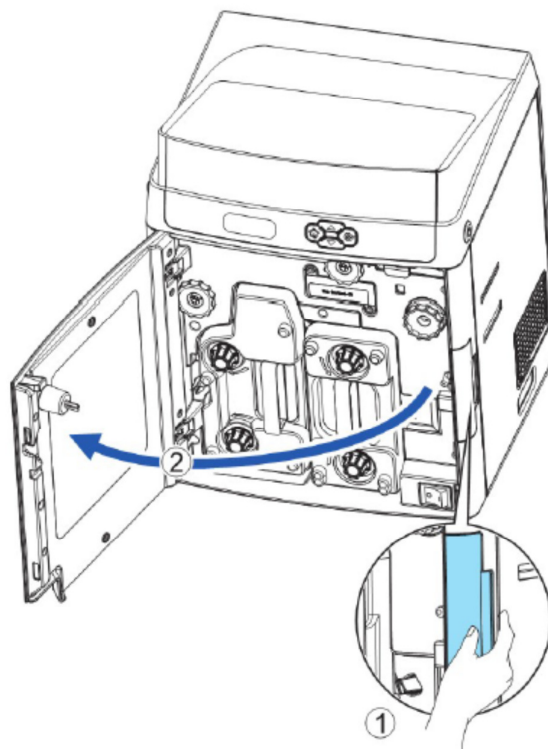

- 2) Push the Ribbon Lock① clockwise to unlock the ribbon cartridge and pull out the whole cartridge②.

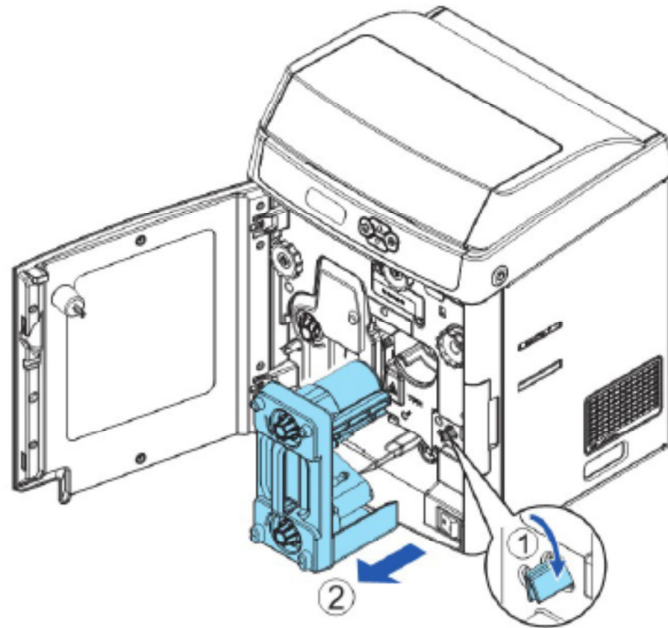


- 3) To load a new ribbon onto cartridge, place or engage orange spool ① of ribbon to feeding hub of the cartridge.
- 4) While unwinding the ribbon film, route② the film around three guiding poles.
- 5) Finally engage the black spool to the winding hub ③ of the cartridge.

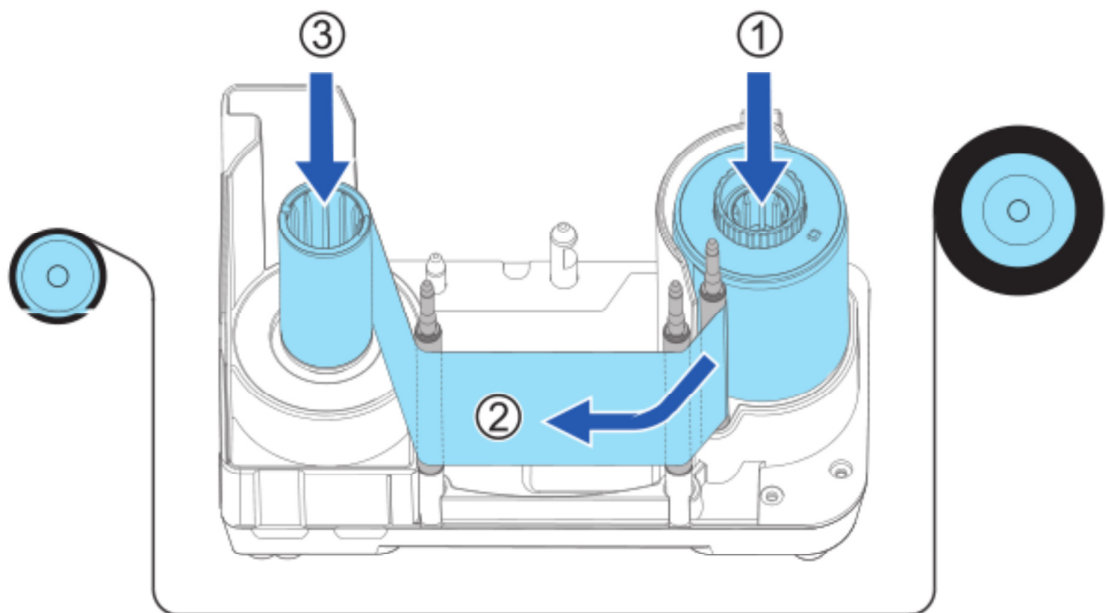


**NOTE –**

- Apply some force to push in the spools to the hubs.
- The ribbon should be slightly tightened and not slanted.

- 6) As shown in the right diagram, push in the ribbon cartridge to the far end until a “click” is heard to indicate correct insertion.

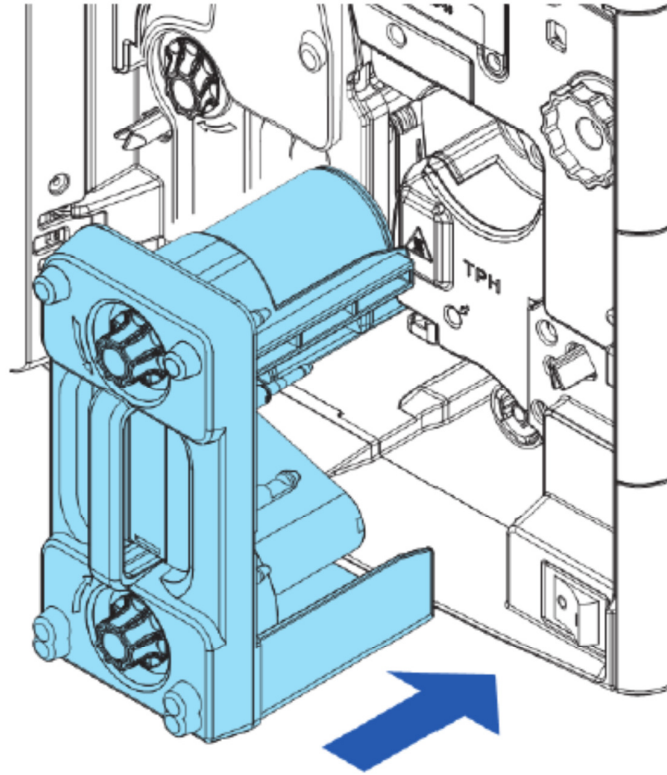

- 7) Close the front cover to its original position.

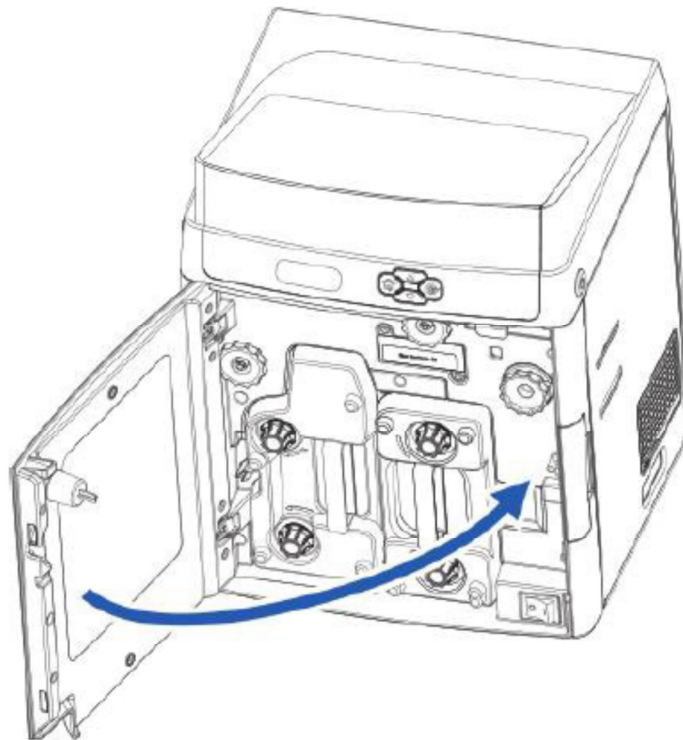

- 8) Press the **SET** key when the LCD screen displays [Please press SET key].